

## SERVICE BULLETIN

from: TRIO-KENWOOD COMMUNICATIONS, INC.

VFO-230


#838

SUBJECT: VFO-230 OPERATION ON 240V AC

DATE 12/15/80

To operate the VFO-230 on 240V AC, the power transformer primary tap must be rewired from 120V to either the 220V or 240V tap.

- 1. Unplug the AC power cable and VFO interconnecting cable.
- 2. Remove the top cover.
- 3. Move the AC line from the 120V (Red) to either the 220V (Green) or 240V (Blue) transformer winding.
- 4. Change the AC fuse from 0.5A to 0.3A. Tag the power cord at the back of the unit to indicate that the transformer is wired for 240V AC, and the power fuse should be 0.3A and not 0.5A.
- 5. Replace the top cover and cable up to verify your work.

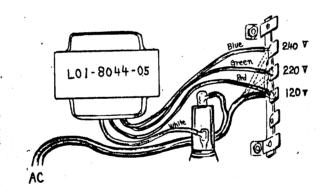

JEB/yn